

## SPARE PARTS FOR VALVE BLOCK TYPE BKH 1÷4 AND BKHR...4152890XXX

| Item | Spare Parts   | Code No   | Number per Block   |
|------|---|---|--|
| 1    | PLUG  | 49561 039 00  | 1  |
| 2    | "O" RING 11,2x1,8   | MP011B005   | 2  |
| 3    | VALVE SEAT  | 45422 002 00  | 1  |
| 4    | "O" RING 9x1,8  | MP011V003   | 2  |
| 5    | RELIEF VALVE ****   | 289 0390 001  | 2  |
| 6    | SPRING  | 59113 607 00  | 1  |
| 7    | <u>HOUSING</u><br>For BKH1...<br>For BKH1... M<br>For BKH1... A<br>For BKH2, 3...<br>For BKH2, 3...M<br>For BKH2, 3...A<br>For BKH4...<br>For BKH4...M<br>For BKH4...A<br>For BKHR...<br>For BKHR...A | 51115 008 00<br>51115 011 00<br>51115 012 00<br>51115 009 00<br>51115 013 00<br>51115 014 00<br>51115 010 00<br>51115 015 00<br>51115 016 00<br>51142 20100<br>51142 289 00 | 1<br>1<br>1<br>1<br>1<br>1<br>1<br>1<br>1<br>1<br>1<br>1 |
| 8    | RELIEF SEAT   | 45422 003 00  | 1  |
| 9    | PLUG  | 49561 110 00  | 1  |
| 10   | WASHER 18x22  | MP021B004   | 1  |
| 11   | SETTING SCREW   | 49841 016 00  | 1  |
| 12   | <u>SPRING</u><br>For drop pressure 80, 100 bar<br>For drop pressure 125, 150 bar  | 59113 410 00<br>59113 329 00  | 1<br>1   |
| 13   | PISTON****  | 42361 006 00  | 1  |
| 14   | VALVE SEAT **, ****   | 45142 031 00  | 1  |
| 15   | <u>SEAL PLUG</u><br>For BKH1÷4... G1/2<br>For BKH1÷4...M M22x1,5<br>For BKH1÷4...A, BKHR...A ¾ – 16 UNF<br>For BKHR M18x1,5   | 49541 703 00<br>49541 704 00<br>49541 709 00<br>49541 708 00  | 4<br>4<br>4<br>4   |
| 16   | <u>SCREW***</u><br>For BKH1÷4... M10x1x40<br>For BKH1÷4...M, BKHR...M M10x1x40<br>For BKH1÷4...A, BKHR...A 3/8-24 UNF-2Ax1,5"   | -<br>-<br>-   | 2<br>2<br>2  |
| 17   | SPRING WASHER ***   | -   | 2  |
| 18   | NAME PLATE  | 49961 880 00  | 1  |
| 19   | RIVET (without for BKHR)  | MP08B057  | 2  |
| 20   | PIN 4.76x15.7   | MP11005   | 1  |
| 21   | "O" RING 25x2,65  | MP011B010   | 4  |

| Item | Spare Parts              | Code No      | Number per Block |
|------|--------------------------|--------------|------------------|
| 22   | CHECK VALVE ****, **     |              |                  |
|      | For BKH1,2,4...          | 137 2000 010 | 1                |
|      | For BKH 3... and BKHR... | 137 0130 010 | 1                |
| 23   | FACE SEAL                | 56122 724 00 | 1                |

- NOTES:**
- \* - Contained in Seal Kit . Code No 41 5289 0390
  - \*\* - The parts are stuck into the Housing.
  - \*\*\* - This parts are sold separately upon the client's request.
  - \*\*\*\* - This parts are not dismountable and ordering available - only in complete!

### Seal Kit for Valve Blocks Type BKH 1÷4 and BKHR...

| Item | Spare Parts       | Code No<br>41 5289 0390 | Number per Block |
|------|-------------------|-------------------------|------------------|
| 2    | "O" RING 11,2x1,8 |                         | 2                |
| 4    | "O" RING 9x1,8    |                         | 2                |
| 21   | "O" RING 25x2,65  |                         | 4                |

### Tightening Torque

| Item | Tightening Torque [daNm] |
|------|--------------------------|
| 1    | 2,5÷3,0                  |
| 8    | 2,5÷3,0                  |
| 9    | 3,0÷4,0                  |
| 16   | 2,0÷3,0                  |









